






SHAKE IT

Before first use, shake the marker with the cap closed for 60 seconds. The mixing ball in the marker makes a clicking



Slowly press the tip several times on a test paper until the ink is visible. When the ink flow is activated, the nib will slowly soak itself full.

When the tip is filled with paint, test the marker on the test paper.

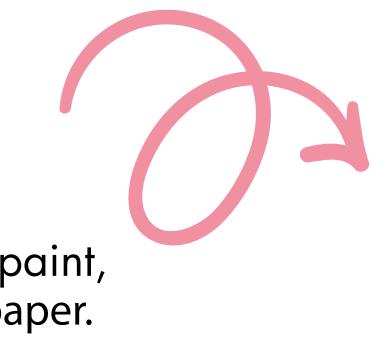


DRAW IT For even application of paint, pump




CLOSE IT Before putting it away, close the marker tightly with a distinct clicking sound.




Always store the marker horizontally.

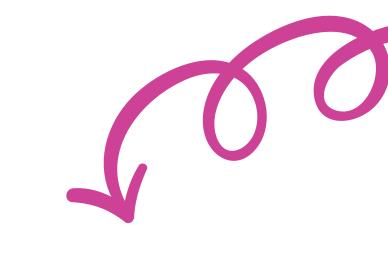

For better durability, spray over artwork with Marabu varnish. Fix fabric in the oven at 150°C for 8 minutes.

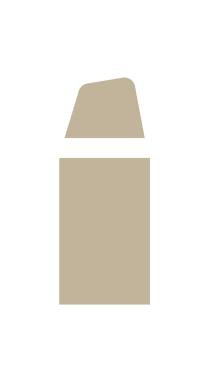

111 WOOD 111 METAL 111 PLASTIC 111 GLASS 111 PORCELAIN 111 CLAY 111 STONE

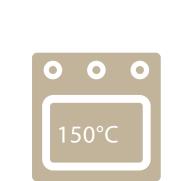

111 FABRIC

